

Inside Instructions

Congratulations on purchasing the Ecoballs™ you have taken a step to help reduce toxic chemicals from your clothing and from entering our water supply. You will also cut your washing bills by up to 80%.

Directions for use

Follow laundry fabric care label instructions and place the load in the machine drum. Never overload the machine, we recommend a $\frac{3}{4}$ load as the Ecoballs™ must be allowed to circulate freely in the water and amongst the clothes to achieve the desired results.

Place all 3 Ecoballs on top of the load together inside the drum

Ecoballs™ need to circulate in the water so only use your regular washing programme and do not select a reduced water program. You can use an ECO setting as long as the water that is used during the washing cycles is not reduced. Select the desired temperature, between 30 oc 60 oC. Do not boil wash with the Ecoballs™ you will shorten their life.

The pellets inside the Ecoballs™ do not contain any fillers, builders or any chemical that leaves a build up in the fabric, therefore you may cut out the rinse cycle from your wash programme to save water, if your machine allows. This is usually in the form of the RINSE HOLD button. If you cannot cut out the rinse, you can still use the Ecoballs™ through the rinse – you just will not be saving any water. Wash time should be around 30 minutes to gain maximum washes.

You may continuously use the Ecoballs™ wash after wash but once you have finished all your washing for the day you must always take the Ecoballs out of the drum to dry.

Ecoballs™ cannot be used in the tumble dryer, the dryer will shorten the life of the Ecoballs™